

THK CHUO

Precision Stage Series

 
Fix Stages

NEW



Don't move!
Sit still!

The position locks after adjustment,
with no clamp required.

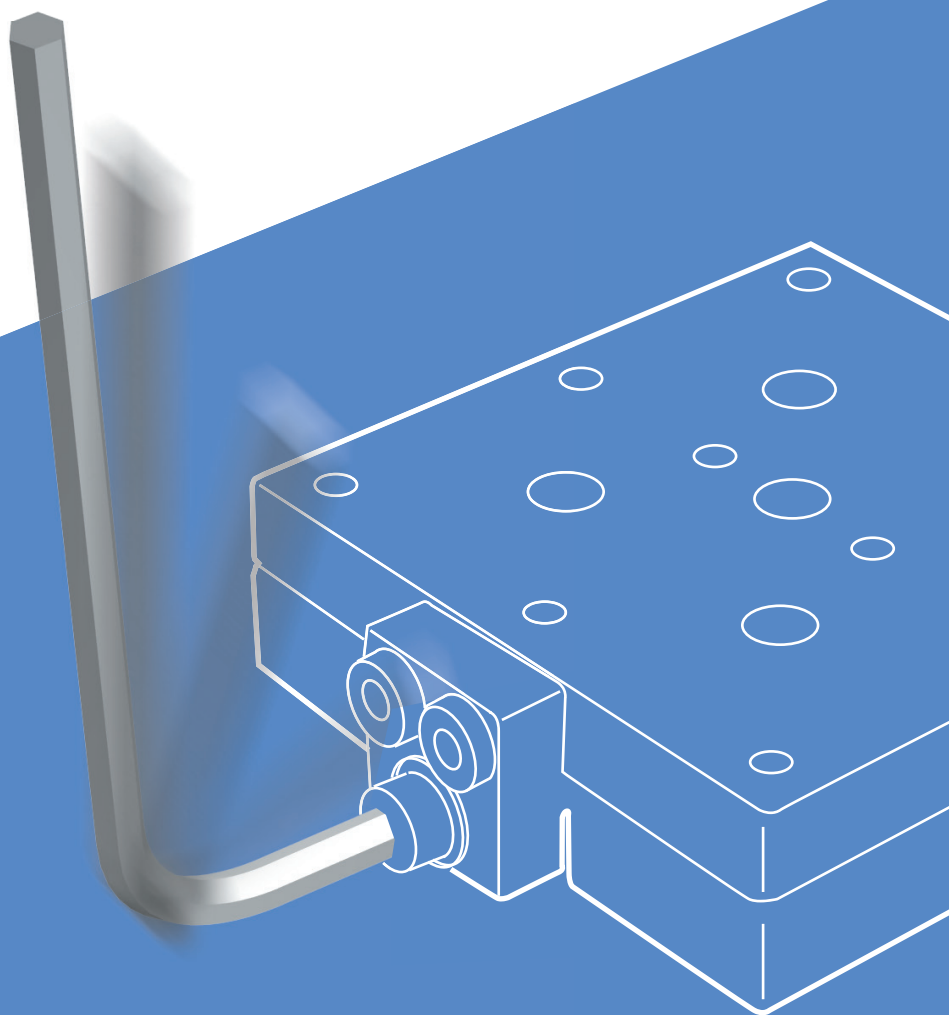

Having trouble with manual stages?

Manual Stages


Example 1

After adjusting the position, the stage ends up moving when the clamp is used.




Example 2

 The stage ends up moving because of forgetting to use the clamp.

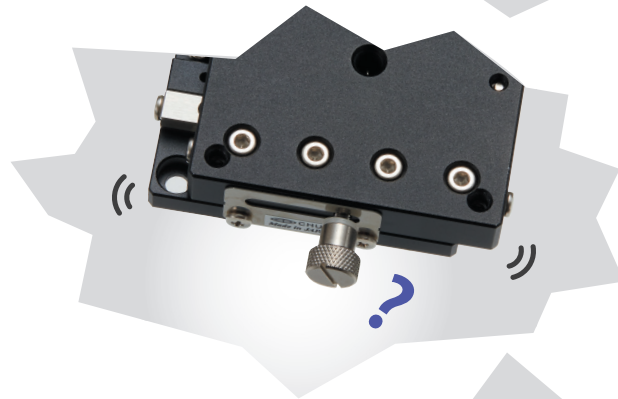


Example 3

 
The stage ends up moving because the clamp comes loose.

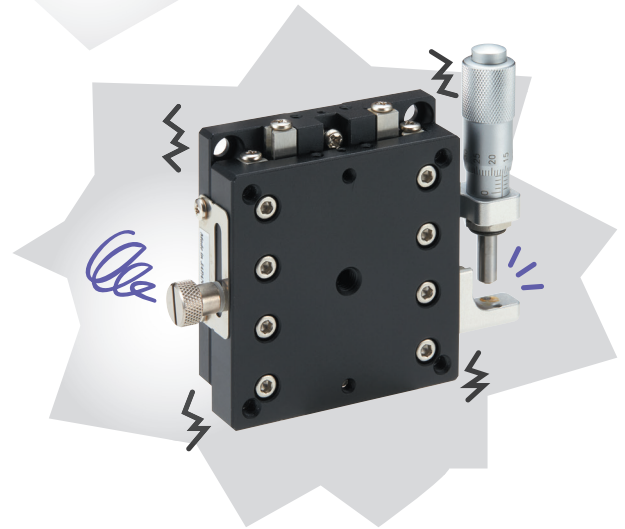

 
Fix Stages are perfect for tasks such as:

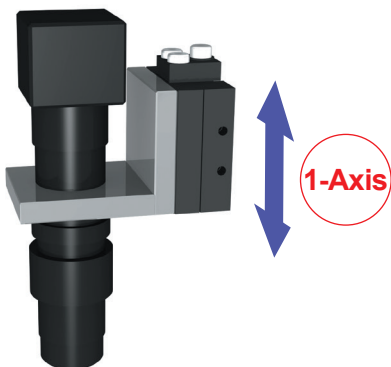

Adjusting camera AF positions

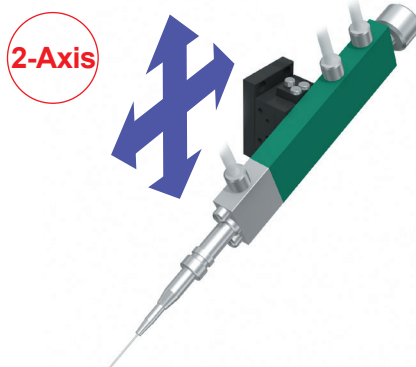 

Positioning dispensers

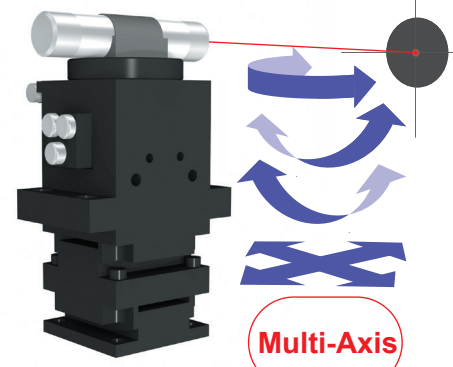 


Adjusting laser focal points

The Fix Stage is the solution!



 After adjusting the position, the stage doesn't move even though it doesn't have a clamp!

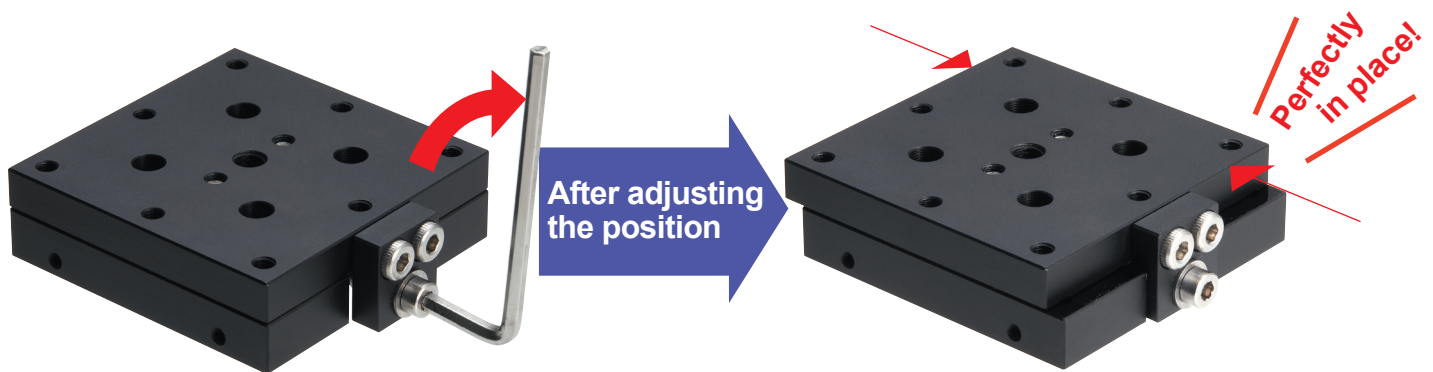

- Once the stage has been moved and its position has been adjusted, it can immediately be fixed in place, and there is no need to use a clamp.
- Thanks to a uniquely developed special mechanism, the stage doesn't move after the position has been adjusted.



 
After the position has been adjusted, no movement can be seen on the indicator scale even when the face of the stage is grabbed and forcefully shaken.

改善 KAIZEN

- ✓ Reduced position adjustment times (increased productivity)
- ✓ Long-term maintenance of position precision (improved quality)

Lineup of X Axis, XY Axis, Thin Type X Axis, Thin Type XY Axis, Z Lift, Goniometer, 2-Axis Goniometer, Rotary, Tilt, and Transmission Type in various sizes.

*The dimensions shown are of the upper face of the stage (width × depth).

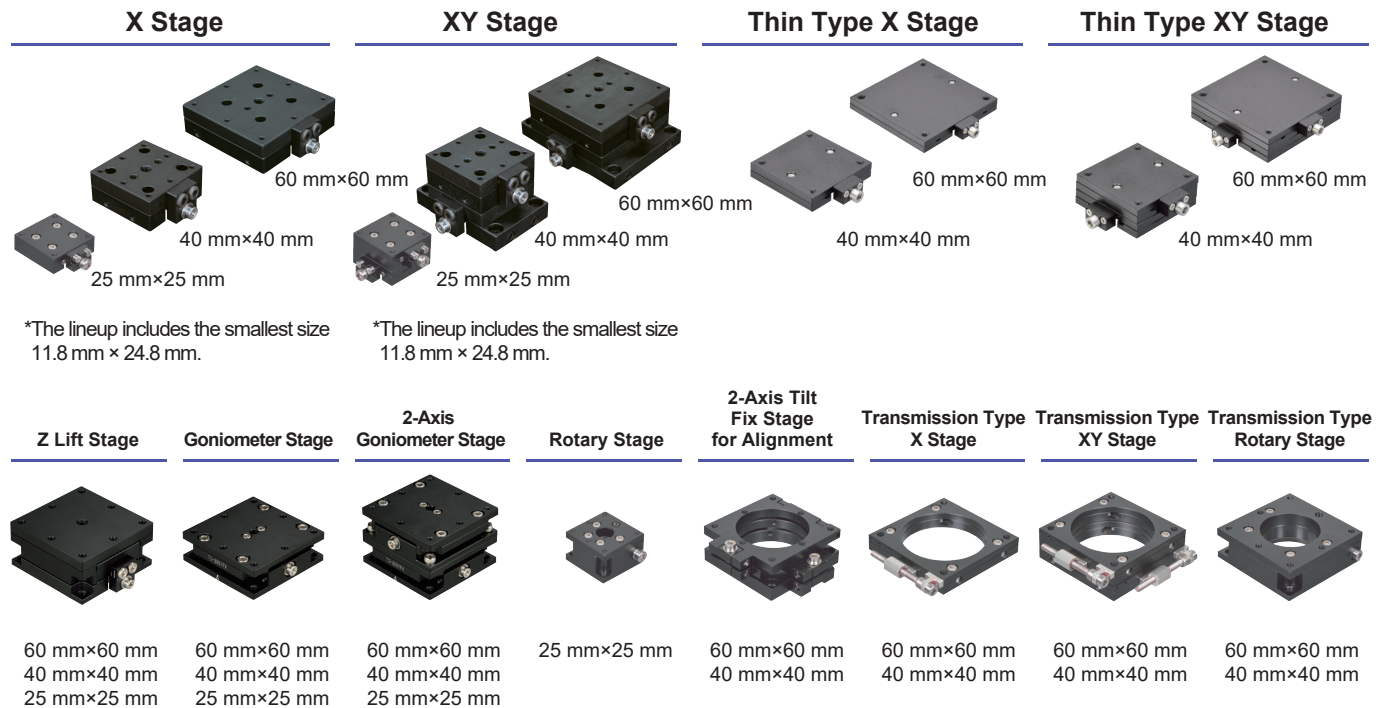


*The lineup includes the smallest size 11.8 mm × 24.8 mm.

*The lineup includes the smallest size 11.8 mm × 24.8 mm.

● **Website** <https://www.thk.com/precisionstage/de/en/> Offered in multiple languages



 Product catalogues, CAD (2D, 3D), and user manuals can be downloaded.

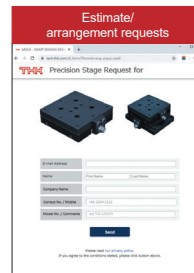

Estimates/arrangements regarding selected precision stages can be easily requested.



*Outward appearances and specifications are subject to change without notice for the purpose of improvement. Please consult with THK before using.

THK CO., LTD.

Headquarters 2-12-10 Shibaura, Minato-ku, Tokyo 108-8506 Japan
 International Sales Department Phone: +81-3-5730-3860
www.thk.com

Europe

THK GmbH

- European Headquarters.....Phone: +49-2102-7425-555
- Düsseldorf OfficePhone: +49-2102-7425-0
- Stuttgart Office.....Phone: +49-7141-4988-500
- U.K. Office.....Phone: +44-1384-471550
- Italy OfficePhone: +39-02-9901-1801
- Sweden Office.....Phone: +46-8-445-7630
- Austria Office.....Phone: +43-7229-51400
- Spain Office.....Phone: +34-93-652-5740
- Turkey Office.....Phone: +90-216-362-4050
- Prague OfficePhone: +420-2-41025-100
- Moscow OfficePhone: +7-495-649-80-47
- THK Europe B.V.
- Eindhoven Office.....Phone: +31-40-290-9500
- THK France S.A.S.
- Paris Office.....Phone: +33-1-7425-3800

North America

THK America, Inc.

- Headquarters.....Phone: +1-847-310-1111
- Chicago OfficePhone: +1-847-310-1111

- North East Office.....Phone: +1-631-244-1565
- Atlanta Office.....Phone: +1-770-840-7990
- Los Angeles OfficePhone: +1-949-955-3145
- San Francisco Office.....Phone: +1-925-455-8948
- Detroit OfficePhone: +1-248-858-9330
- Toronto OfficePhone: +1-905-820-7800

South America

THK BRAZIL INDUSTRIA E COMERCIO LTDA.

Phone: +55-11-3767-0100

China

THK (CHINA) CO., LTD.

- HeadquartersPhone: +86-411-8733-7111
- Shanghai Branch.....Phone: +86-21-6219-3000
- Beijing BranchPhone: +86-10-8441-7277
- Chengdu BranchPhone: +86-28-8526-8025
- Guangzhou BranchPhone: +86-20-8523-8418
- Shenzhen BranchPhone: +86-755-2642-9587
- Xian Branch.....Phone: +86-29-8834-1712
- THK (SHANGHAI) CO., LTD.Phone: +86-21-6275-5280

Taiwan

THK TAIWAN CO., LTD.

- Taipei Headquarters.....Phone: +886-2-2888-3818
- Taichung OfficePhone: +886-4-2359-1505
- Tainan OfficePhone: +886-6-289-7668

South Korea

- Seoul Representative Office.....Phone: +82-2-3468-4351

Singapore

THK LM System Pte. Ltd.....Phone: +65-6884-5500

Thailand

THK RHYTHM (THAILAND) CO., LTD. LM System Division

- Bangkok Branch.....Phone: +66-2751-3001

India

THK India Pvt. Ltd.

- Headquarters & Bengaluru Branch.....Phone: +91-80-2340-9934
- Pune Branch.....Phone: +91-72-7600-2071
- Chennai Branch.....Phone: +91-44-4042-3132
- Ahmedabad BranchPhone: +91-79-6134-4925
- Delhi Branch.....Phone: +91-12-4676-8695